


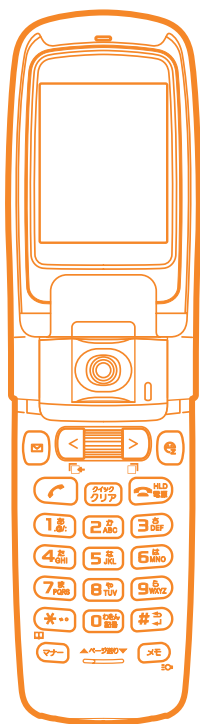

A1301S

Basic Manual



Before Use

**Making and
Receiving Calls**

**Using the
Address Book**

Using Mail

**Using the
Camera**

Using EZweb

Inputting Text

Troubleshooting

Other Features

Read this manual first.

Welcome

Thank you for buying the A1301S.

Before using your A1301S, be sure to read the A1301S Manual and Basic Manual (PDF manuals) to ensure correct use of your A1301S. After you have finished reading these manuals, store them and the printed manuals in a safe place so you can retrieve them whenever you need them.

Printed manuals for A1301S (Japanese)

The A1301S comes with the Basic Manual and the Manual.

If you want to know about basic operations:


A1301S Basic Manual

Equivalent to this English PDF Basic Manual.

If you want to know details about various functions:

A1301S Manual

Equivalent to the English PDF Manual.

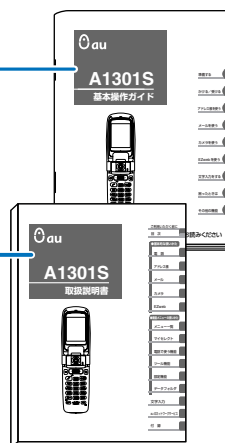

In some of the displays used for descriptions in this manual, the icon display area at the top of the display and the soft key option display area at the bottom of the display may be omitted to simplify descriptions. Also, the typeface and shape of fonts used in displays may differ from those used in actual displays or may be omitted.

Cellphone etiquette

- Weak radio waves are emitted from cellphones at all times even if you just turn the power on.
- Enjoy and safely use your cellphone without forgetting those around you.


● Use of cellphones is not allowed in some places.

- Do not use cellphones while you are driving. Doing so is both dangerous and forbidden by law.
- Radio waves may interfere with airplane operation. Be sure to turn your cellphone off before you board airplanes.




● Radio waves from cellphones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using a pacemaker. Turn your cellphone off in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.

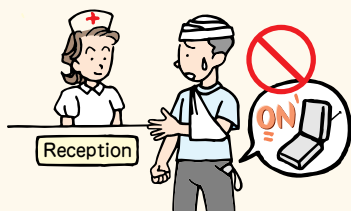

● Consider where to use your cellphone and be careful of how loudly you talk.

- Do not make calls from cinemas, theaters, museums, libraries and other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being inconvenienced by the incoming ring.

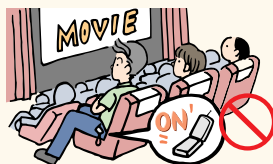

- Use your cellphone in places where you will not prevent others from passing through.
- Move to areas where you will not cause others inconvenience on trains or in hotel lobbies.
- Take care not to talk too loudly during conversations.



- Get other people's permission before you start taking photos with the cellphone's camera.



Basics of the cellphone

What A1301S offers

Phone calls

Your cellphone is full of handy functions like an address book, call records, and manner mode.



Read
from
page **22**

Internet

You can view news, or download incoming melodies or wallpaper.



Read
from
page **66**

Mail

You can send mail to other cellphones or PCs.




Read
from
page **43**

Camera

You can easily take photos and send them by e-mail.



Read
from
page **59**

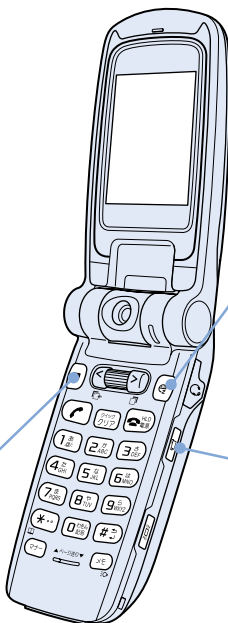


Manner mode and record message

Manner mode – For turning sound off




You can use the manner mode to turn incoming rings and other tones off to prevent others around you from being inconvenienced.


Hold down  for at least one second in the standby display.

See
page **30**

Record message – When you cannot answer the phone

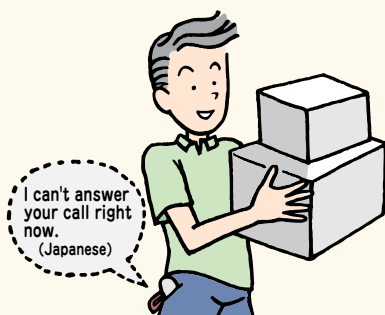

You can play answer messages and record messages from other parties when you cannot answer the phone.

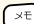Hold down  for at least one second in the standby display.


See
page **34**

Check the power, reception, and battery

Usually, keep the cellphone's "power" on.



To make or receive calls, turn the power on.


Hold down  for at least one second.

See
page 14

You cannot talk if you are not receiving "radio waves."



It is sometimes difficult to receive radio waves in some places even in service areas.

 indicates the reception state.




 
See
page 14

Pay attention to the remaining "battery" power.



Sometimes the cellphone will not function properly if the remaining battery power is low.

 indicates the remaining battery power.



See
page 14


Watch out for spam and one-ring calls!

If you get incoming spam...

You can use mail filter functions to disable reception of just specified mail or block mail indicated as "未承諾広告※" that contains lots of spam.

The following mail functions are available for preventing arrival of spam:


- "未承諾広告フィルター": To block spam
- "アドレスフィルター": To filter various addresses
 - "指定拒否設定" not to receive specified mail
 - "指定受信設定" to receive only specified mail

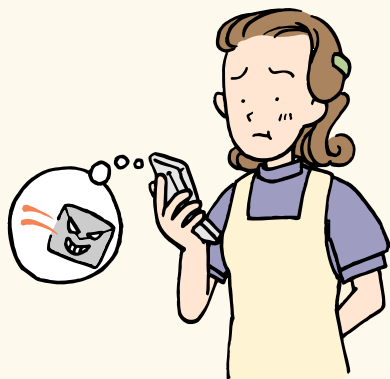


See
page **52**

If you have an incoming call from an unknown number...

Such calls may be an invitation to you to return a call to services with very high charges. (This is a "one-ring call.")

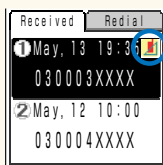

The red icon  is displayed in the Received display when you receive a one-ring call.

See
page **27**

Contents

● Before Use	10
Checking the package	10
Names of parts	11
Charging the battery pack	12
Extending the antenna	13
Turning the power on/off	14
Before using the English display	15
Learning the Basics	15
Icon display	18
Confirming your cellphone number	19
Initial settings for e-mail and EZweb	20
● Making and Receiving Calls	22
Making a call	22
Receiving a call	24
Redialing the number you called (Redial)	25
Redialing the number you received (Received)	26
Filtering one-ring calls	27
Changing the volume of the incoming ring	28
Setting the manner mode	30
Changing the volume during a call	31
Changing the tone of the incoming ring	32
Recording the message when you cannot answer a call	34
Playing back the recorded message	35
● Using the Address Book	36
Saving to the address book	36
Making a call from a registered phone number	38
Editing the address book	40
Saving a received call	42
● Using Mail	43
Using e-mail	43
Confirming your e-mail address	44

Changing your e-mail address	45
Creating and sending e-mail	48
Opening a received e-mail	51
Filtering spam service	52
Replying to a received e-mail	53
Using C-mail	55
Creating and sending C-mail	56
Opening a received C-mail	58

● Using the Camera 59

Taking photos	59
Viewing photos you have taken	61
Recording a movie	62
Viewing a movie you have recorded	64
Sending an image with an e-mail immediately after you take it	65
Photo-mail	65

● Using EZweb 66

EZweb (Internet)	66
Learning Basic EZweb	67
Viewing information sites	68
Downloading an incoming melody	69
Saving your favorite sites	71
Viewing a site saved to the Favorite list	72
Viewing call costs	73

● Inputting Text 74

Inputting Text	74
Inputting icons	76

● Troubleshooting 77

● Other Features 78

● Index 79

Before Use

Checking the package

The package contains the main unit and accessories.


- Main unit



- Battery pack (inside the main unit)



- Front ornamental panel (3 pieces*)

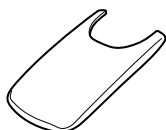


- Rear ornamental panel (2 pieces*)



* One of them is already attached to the main unit.

* One of them is already attached to the main unit.

- AC adaptor

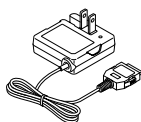

- Desktop holder



(For details on how to assemble the desktop holder, see page 12.)

- Basic Manual (Japanese)




- Manual (Japanese)



- Warranty (Japanese)
- Safety precautions (Japanese)

Names of parts

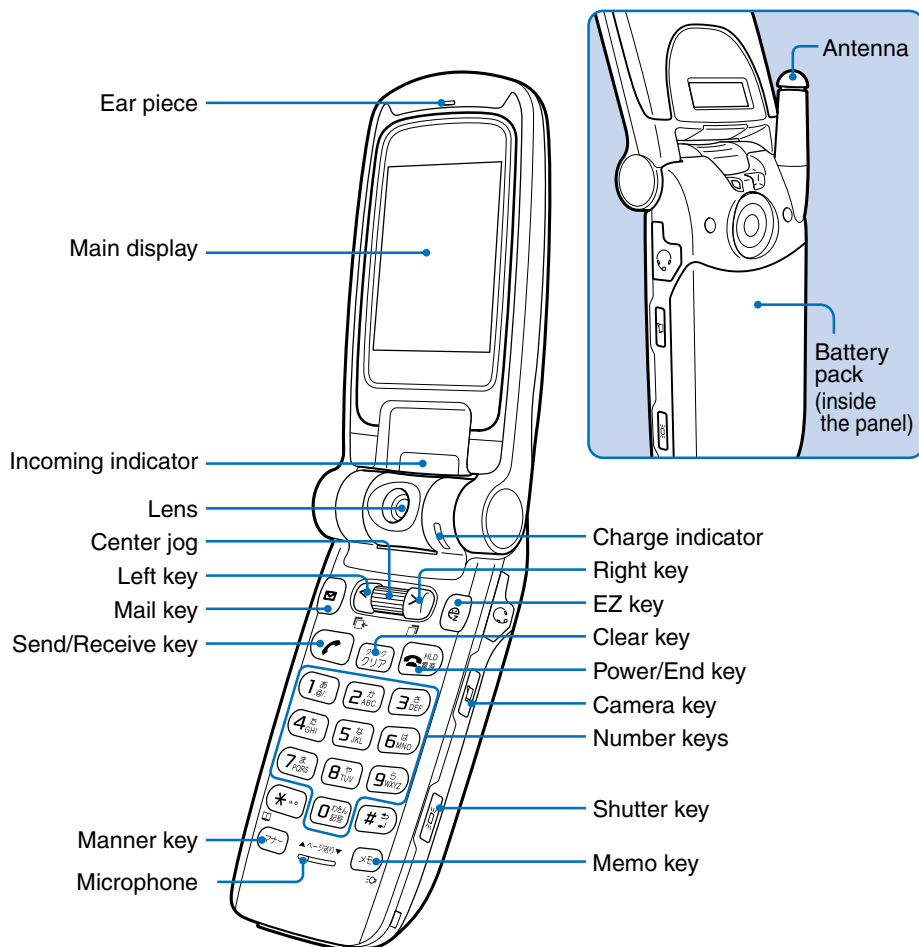


Charging the battery pack

Before you use your cellphone, first assemble the desktop holder and charge the battery pack (inside the battery panel).


How to assemble the desktop holder

Follow the procedure below to assemble the desktop holder when using it for the first time.

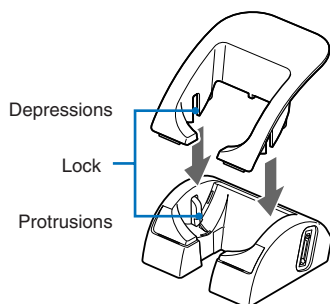

Align the locking section (protrusions and depressions), and insert until you hear the desktop holder click into place.

Charging the battery pack

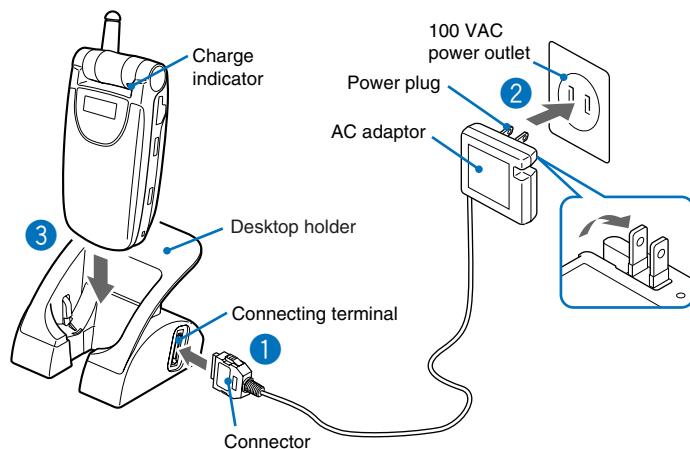

- The charge indicator lights red: The battery pack is being charged.
- The charge indicator lights green: Charging is complete.

1

Connect the AC adaptor to the desktop holder.

2

Connect the AC adaptor's power plug to a 100 VAC power outlet.

3

Fold the A1301S with the battery pack attached as shown in the figure, then insert it into the desktop holder.



Be sure to fold the A1301S when you charge it. Charging will not start if the A1301S is opened out.



When removing the A1301S from the desktop holder, hold the desktop holder firmly and remove the A1301S.


Extending the antenna

Hold the tip of the antenna, and extend the antenna until you hear it click into place.



If the antenna is not fully extended, reception sensitivity will be worse as the antenna is unstable.


Radio waves can be received and sent more easily if the antenna is extended vertically to the ground.

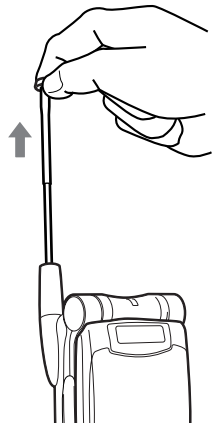

Turning the power on

The standby display appears when you turn the A1301S on.

You can operate the A1301S functions, e.g. phone and mail, from the standby display. To return to the standby display, press the power key.

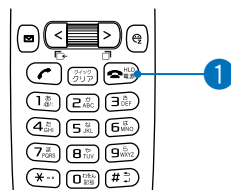





1






Hold down  for at least one second.


➡ When the power is turned on, the standby display appears.

Check the remaining battery power. _____

			
Full	Medium	Low	No power left

Check the reception state. _____

				
Strong	Medium	Weak	Very weak	Out of service area

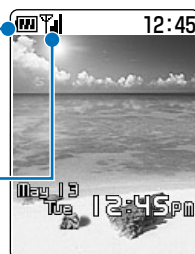

- You cannot receive or make calls if "圏外" (Out of service area) is displayed.
- Sometimes you cannot receive or make calls if "〒" (Very weak) is displayed.


Turning the power off

1





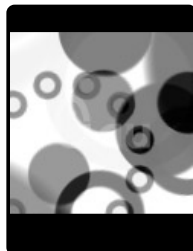

Hold down  for at least 1.5 seconds.



To receive calls, leave the power on.





Before using the English display


- ① Press  in the standby display, and use  and  to select  (設定) → "画面設定."
- ② Use  and  to select "Set Language" → "English."

Learning the Basics


Basic operations

Start with how to use  and .

	Press the center jog.
	Turn the center jog up or down.

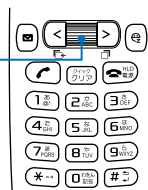

To use the Index menu

You can operate the Index menu by using  and . Each of the A1301S functions can be called up from the Index menu.

1

Press  in the standby display.

Press the center jog with the cellphone turned on.

➡ The Index menu appears.



2

Turn .

Turn the center jog up or down.


➡ You can perform operations in the Index menu.

Learning the Basics (continued)

3



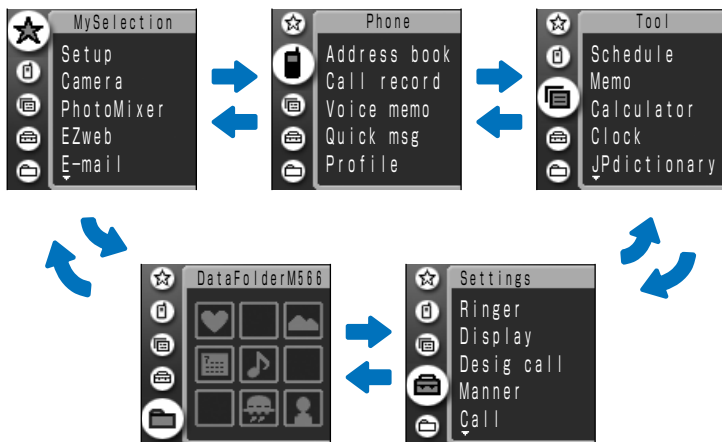


Turn  and press  (select).

➔ You can set each of the items in the Index menu you have selected.



If you have made a mistake, press . You can cancel the operation or return to the previous display.


The Index menus contains the following functions.

 (MySelection)	You can save any combination of menu items to suit your particular preferences.
 (Phone)	This is handy for making call settings such as address book or voice memos.
 (Tool)	This menu provides you with a schedule, memo note page, calculator and other handy features for making the most of your A1301S.
 (Settings)	This menu allows you to set Ringer, Display, Security and other settings.
 (DataFolder)	This menu allows you to use various data by category.

Soft keys

When an option is displayed in the soft key option display area, you can use that option by pressing one of the soft keys shown in the table below. The soft key display changes according to the display.


Soft keys are sometimes not displayed in the standby display. To display the soft keys, press any key.

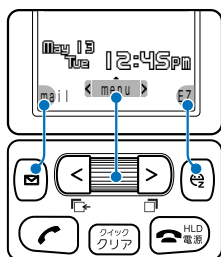

Soft key 1 	Executes the option displayed at the bottom left of the display.
Soft key 2 	Executes the option displayed at the bottom center of the display.
Soft key 3 	Executes the option displayed at the bottom right of the display.

To use the keys

- : Received call record (see page 26).
- : Sends and receives e-mail.
- : Deletes characters and clears operations.
- : Makes or receives a call.
- , : Inputs phone numbers or characters.
- : Sets or cancels the manner mode.

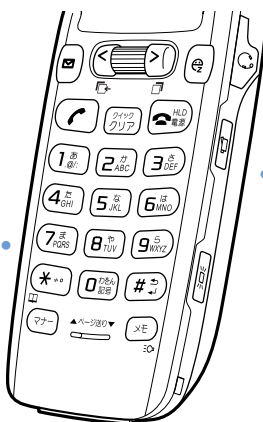

- Press : Calls up displays, etc.
- Turn : Calls up the address book, etc.
- : Redial call record (see page 25).
- : Accesses EZweb (Internet).
- : Turns the power on/off, and ends a call.
- : Operates the camera.
- : Sets or cancels the record messages.
- : Takes photos or movies.


If you are unsure of an operation or you have made a mistake, return to the previous display by pressing , or return to the standby display by pressing .

Icon display

You can check arrival of mail, function settings and other information by icons (pictures that represent functions or states). Remembering the main icons will come in handy during operation.

Main icons


Before Use

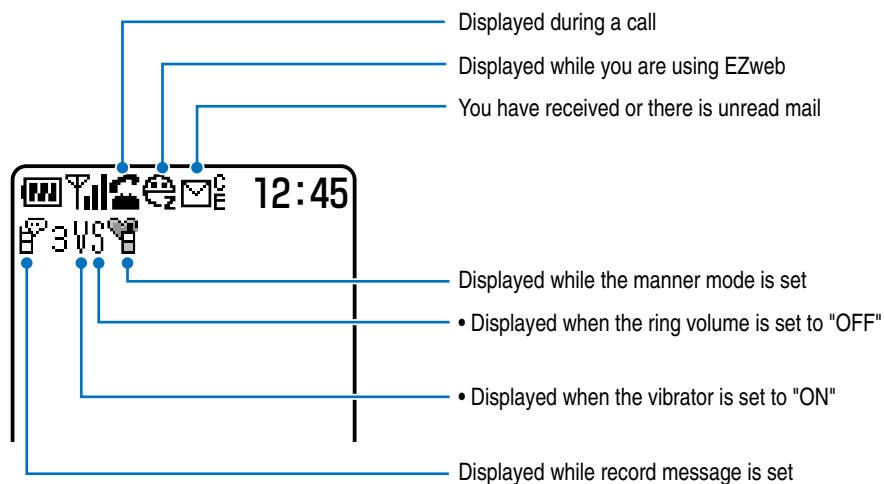

For details about icons, refer to "How to view the display" in the A1301S Manual (PDF, provided).

Confirming your cellphone number

You can confirm your cellphone number.

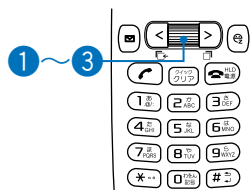

- 1 Press  in the standby display.

➡ The Index menu appears.



- 2 Turn  to select  (Phone), and press  (select).




➡ The Phone menu appears.



- 3 Turn  to select "Profile," and press  (select).

➡ The Profile listing display appears so that you can confirm your cellphone number.



 You can also confirm your cellphone number by pressing  and  in the standby display.


Initial settings for e-mail and EZweb

Skip this section if you are not going to use either e-mail or EZweb.

If you are going to use e-mail or EZweb, you must make the initial settings.

Your e-mail address is automatically determined when you make the initial settings.

You can also change your e-mail address to any address you like after you have made the initial settings (see page 45).

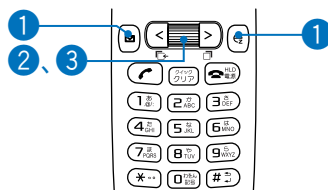

1

Press  (mail) or  (EZ) in the standby display.

Format EZweb,
Press OK,
please wait

2

Press  (ok).

Update the
settings.

please be
patient...


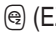


Wait a short while until the display on the right appears.


Update is
complete.

3


Press  (ok).

➔ If you started the initial settings by pressing  (mail), the E-mail menu appears. If you started the initial settings by pressing  (EZ), the EZ menu appears.

E-mail menu	M980
Create new	
Inbox	
Outbox	
Check new mail	
Data folder	
Settings	

Start by 

EZ menu	M970
1 Top menu	
2 Favorite list	
3 Input to URL	
4 Disp preview	
5 Data folder	
6 Screen memo	
7 Reset	


Start by 

Making and Receiving Calls

Remember basic phone operations.

Making a call

Dial a phone number to make a call.

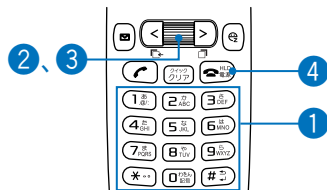

1

Press **0** (0) to **9** (9) to input the other party's phone number.

To call a regular phone

Input the phone number starting with the area code.

To call a cellphone, carphone or PHS

Input all of the 11 digits in the phone number.

030001XXXX



2

Press **Call** (call).

➡ The call method selection display appears.

 
About call methods

"Call": Your cellphone number is notified or not notified according to the caller ID setting.

"184+call": Your cellphone number is not notified to the other party.

"186+call": Your cellphone number is notified to the other party.

030001XXXX



For details on "Send C-mail," see page 56.

3

Turn  to select the call method, and press  (select).




Wait a short while until you hear the call tone.

4

When you have finished the call, press .

Receiving a call

When you have an incoming call, the incoming ring sounds and the incoming indicator flashes.

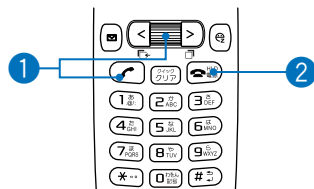

1

Press or (call) to answer the call.

When a phone number is displayed:

The other party has set Notify user ID to ON. If the other party's name is already saved in the address book, that person's name will also be displayed

When "User unset" is displayed:

The other party has set Notify user ID to OFF.

When "Pay phone" is displayed:

You have received a call from a pay phone.

When "Not support" is displayed:

You have received a call from a party that is not able to notify you of their phone number.

Susan Jones

0900001XXXX



Incoming call

User unset



2

When you have finished the call, press .

Display if you could not answer a call

If you could not answer a call, you are notified that you had a call on the display. If you press , you can confirm the phone number of the other party that called you and redial that party (see page 26).


Missed call 1
May 13 10:03

May 13
Tue 12:45PM

Redialing the number you called (Redial)


You can call up a phone number you have previously dialed, and redial that number.


Your A1301S can record up to 30 phone numbers you have previously called.

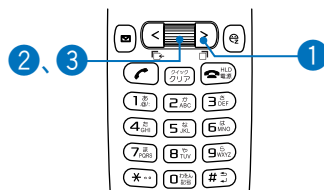



1 Press  in the standby display.


➔ The Redial display appears.

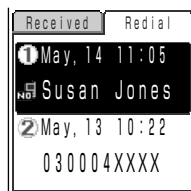 Phone numbers are displayed starting with the phone number you last called.



2 Turn  to select the phone number you want to call, and press  (call).

➔ The call method selection display appears.

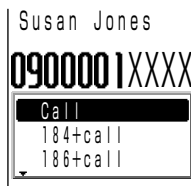


3 Turn  to select the call method, and press  (select).

➔ The call is connected to the phone number you selected.

 For details on call methods, see step 2 on page 22.

Redialing the number you received (Received)


You can redial parties that have called you in the past and that have notified you of their phone number. The Received display can hold the last 30 phone numbers you received in order from the most recent.

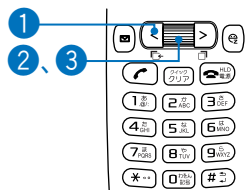

1 Press in the standby display.


➔ The Received display appears.

Phone numbers are displayed starting with the phone number you last received.

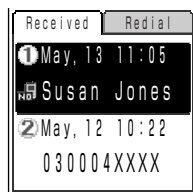

2 Turn to select the phone number you want to call, and press (call).

➔ The call method selection display appears.

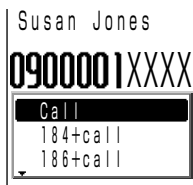

3 Turn to select the call method, and press (select).

➔ The call is connected to the phone number you selected.


For details on call methods, see step 2 on page 22.


Filtering one-ring calls

What is a one-ring call?

A "one-ring call" is a call where the other party allows the call to ring only once, thus leaving his phone number in your Received call record. Such calls may be an invitation to you to return the call to connect to a service with very high charges, such as an encounter service.


One-ring call icon

When you have received a one-ring call, a red icon  (for incoming calls of less than three seconds) is displayed in the Received call record. Pay attention to phone calls you receive if you do not recognize the caller's number.

Received	Redial
1 May, 13 19:36 	
030003XXXX	
2 May, 12 10:00	
030004XXXX	

Changing the volume of the incoming ring

You can adjust the volume of the tone (incoming ring) that sounds when you have an incoming call. Note, however, that if the manner mode is set, the volume of the incoming ring cannot be changed.

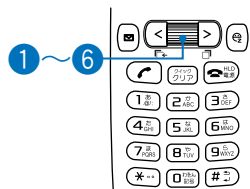

1 Press in the standby display.

➔ The Index menu appears.




2 Turn to select (Settings), and press (select).

➔ The Settings menu appears.




3 Turn to select "Ringer," and press (select).

➔ The Ringer display appears.

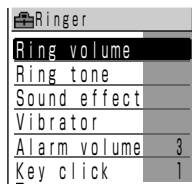

4 Turn to select "Ring volume," and press (select).


➔ The Ring volume display appears.

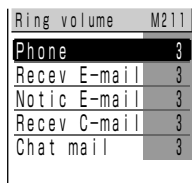

5

Turn  to select "Phone," and press  (select).

➔ The Phone display appears and the incoming ring sounds.

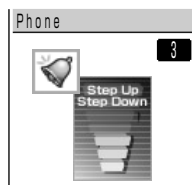

6



Turn  to adjust the volume, and press  (ok).

"OFF": The incoming ring does not sound.

"1" to "5": The incoming ring sounds at the level you set.


"Step Down": The incoming ring sounds increasingly quieter.

"Step Up": The incoming ring sounds increasingly louder.

 "Step Down" and "Step Up" can be selected from five volume levels by turning  upwards.

Setting the manner mode

When the manner mode is set, the incoming ring no longer sounds when you have an incoming call. In this mode, the A1301S vibrates to notify you of incoming calls.

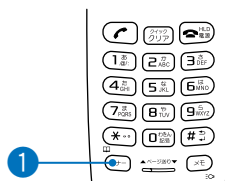

1

Hold down **マナー** for at least one second in the standby display.

➡ "VS" appears.

The recorded message is set at the same time.




To cancel the manner mode

Hold down **マナー** for at least one second in the standby display.

➡ The manner mode is canceled, and VS is not displayed.

Changing the volume during a call


You can adjust the volume of the other party's voice to any of five levels during a call.

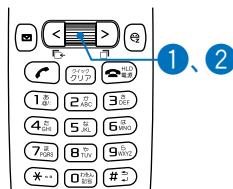

1 Turn during the call.

: Increases the volume


: Decreases the volume

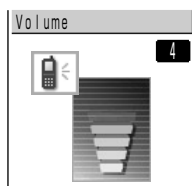

2 Press (ok).

Changing the tone of the incoming ring

You can change the tone of the incoming ring when you have an incoming call.

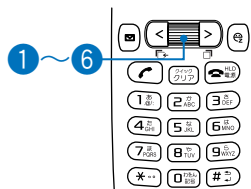

1 Press in the standby display.

➔ The Index menu appears.




2 Turn to select (Settings), and press (select).

➔ The Settings menu appears.




3 Turn to select "Ringer," and press (select).

➔ The Ringer display appears.

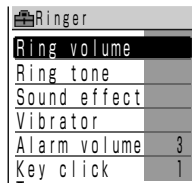

4 Turn to select "Ring tone," and press (select).

➔ The Ring tone display appears.

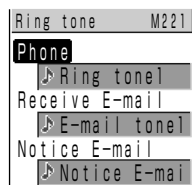



5

Turn  to select "Phone," and press  (select).

➔ The Phone display appears.



If you press  (listen), the ring tone you selected will be played back.

If you press  (stop) while the ring tone is being played, playback of the ring tone will be stopped.




6

Turn  to select an incoming ring, and press  (select).

➔ The incoming ring is set.


Recording the message when you cannot answer a call

You can automatically play answer messages and record messages from other parties when you cannot answer the phone. (record message)

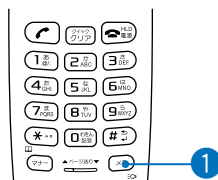


1

Hold down  for at least one second in the standby display.

➡ Record message is set, and  appears.

To cancel record message

Hold down  for at least one second in the standby display.




When you turn the power off or you are in a place where the reception is poor, use the "Voice mail."

For details, see "au Network Services" in the A1301S Manual (PDF, provided).


Playing back the recorded message

You can play back the recorded messages.

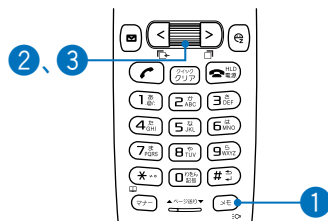


- 1 Press **x E** in the standby display.

➔ The Voice memo display appears.

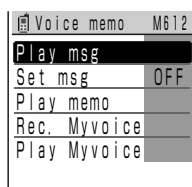


- 2 Turn to select "Play msg," and press (select).

➔ The Play record msg display appears.

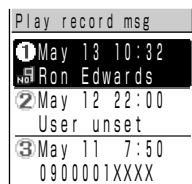

- 3 Turn to select the recorded message to play back, and press (play).

➔ The recorded message is played back.

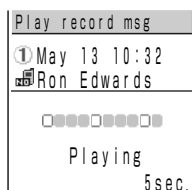


You can delete recorded messages by pressing (delete) while the recorded message is being played back.

Using the Address Book

You can save the phone numbers of parties that you frequently call in the address book. This allows you to easily call up the phone number of parties that you want to call.

Saving in the address book

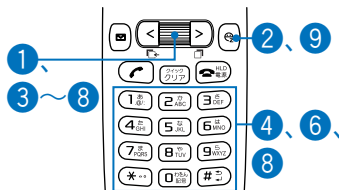


- 1 Turn in the standby display.

➔ The address book list appears.




- 2 Press (new).

➔ The Edit addr book display appears.

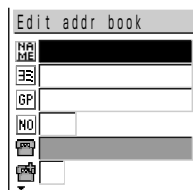

- 3 Turn to select (Name), and press (select).

➔ The Name display appears.

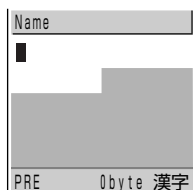




- 4 Input the name, and press (ok).

➔ (JP reading) is automatically inputted.

For details on inputting text, see page 74.



5

Turn  to select  (Phone no.), and press  (select).


➔ The Phone no. display appears.

Phone no.

6




Input the phone number, and press  (ok).

➔ The Edit addr book display reappears.

 If the phone number to save is a regular phone, start by inputting the area code. If the phone number is a cellphone or PHS, input all of the 11 digits in the phone number.

Edit addr book	
NAME	Nancy Brand
NAME	NancyBrand
GP	0
MO	000
NO	030001XXXX
PR	MS

7

Turn  to select  (Mail address), and press  (select).

➔ The Mail address display appears.

Mail address	
PRE	0byte abAB

8


Input the e-mail address, and press  (ok).

➔ The Edit addr book display reappears.


 For details on inputting e-mail addresses, see page 74.


Edit addr book	
NAME	
NAME	
GP	
MO	
NO	
PR	△△△@□□.ne.jp

9

Press  (cmplt).


➔ The e-mail address is saved to number 000 in the address book.

 Phone numbers are automatically saved to unused numbers starting from the smallest number in a range from 000 to 499.

 You can also save items such as group, street address, birthday, and phone number type. Refer to "Address Book" in the A1301S Manual. (PDF, provided)

Making a call from a registered phone number

You can call up phone numbers saved in the address book to make calls. You can also send e-mail from the address book.

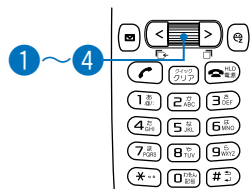

1

Turn in the standby display to open the address book list.

あ	か	さ	た	な	は	ま
相原太一						
青木一郎						
赤坂花子						
阿部						
井田						

To switch from the "あ" to "A" display lines

Press or .

な	は	ま	や	ら	わ	A
Alan Nelson						
Brian Miller						
Carol Adams						
Jane Moore						
John Smith						

2

Turn to select the other party to call, and press (select).

➡ The details saved for the other party that you selected appear.

Nancy Brand						
NO 000						
030001XXXX						
030002XXXX						
0900001XXXX						
△△△@△△△.ne						

3

Turn to select the phone number you want to call, and press (call).

➡ The call method selection display appears.

When there are two or more registered phone numbers, turn to select the desired phone number, and press .

If you select the e-mail address and press , the Create display appears.

Nancy Brand						
030001XXXX						
Call						
184+call						
186+call						



Turn  to select the call method, and press  (select).


➔ The call is connected to the phone number you selected.



For details on call methods, see step 2 on page 22.

Editing the address book

You can edit the details saved in the address book.

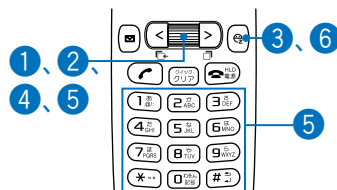

Example: To edit phone numbers.


1

Turn in the standby display to open the address book list.



To switch from the "あ" to "A" display lines

Press or .

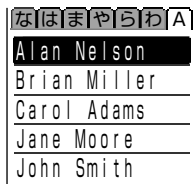

2

Turn to select the address to edit, and press (select).



3

Press (edit).



➡ The Edit addr book display appears.

- 4 Turn  to select the item you want to edit (in this case, ) , and press  (select).

Phone no.
030001XXXX


- 5 Edit the details, and press  (ok).

 Delete saved text by pressing .

- 6 Press  (cmplt).


なほまやらわ A
Nancy Brand

➡ The edited data is saved in the address book.

 To edit names, refer to steps 3 and 4 on page 36.


Saving a received call

You can save the phone number of calls that have arrived in the address book.

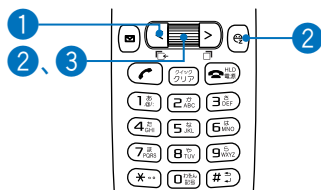

1 Press in the standby display.

➔ The Received display appears.

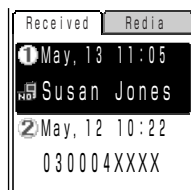

2 Turn to select the phone number to save in the address book, and press (save).

"New": Creates and saves a new address

"Add": Adds and saves details to an address already in the address book



3 Turn to select "New," and press (select).


➔ The Edit addr book display appears.



For details on how to save details in the address book, see page 36.

Using Mail

Using e-mail

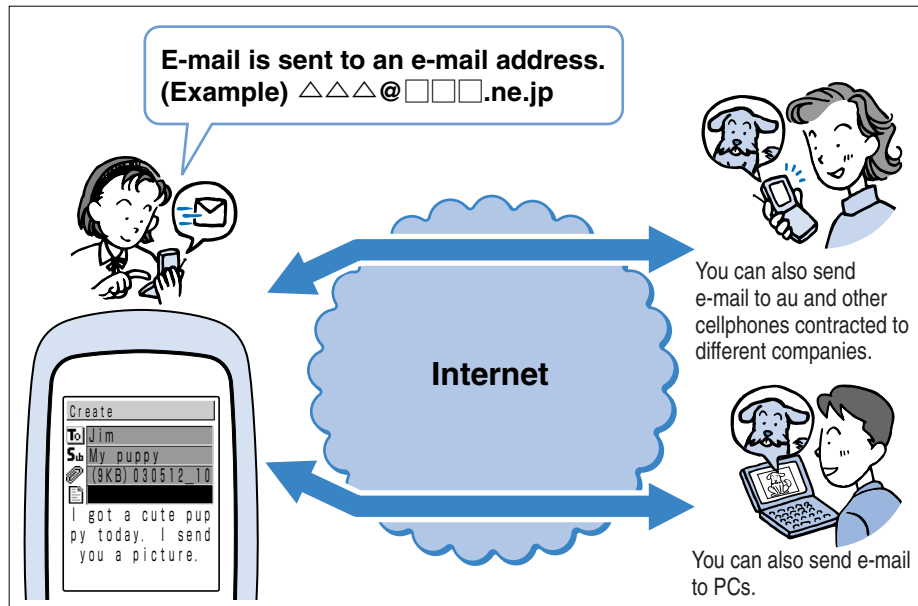
E-mail is a service that allows you to exchange mail with PCs or cellphones that support e-mail using Internet e-mail addresses. Besides being able to send mail comprising up to 5,000 double byte characters, you can also send photos or movies.



-  To use the e-mail service, you must apply to use the EZweb service. If you did not apply to use the EZweb service when you bought your A1301S, contact au by phone or at a store.
-  Before you use the e-mail and EZweb services, you must make the initial settings. If you have not made the initial settings, see page 20.

Confirming your e-mail address

An "e-mail address" is the address you use to send or receive e-mail. Confirm your e-mail address.

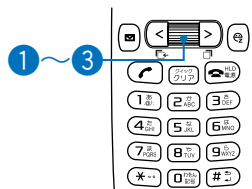


1 Press in the standby display.

➔ The Index menu appears.



2 Turn to select (Phone), and press (select).

➔ The Phone menu appears.

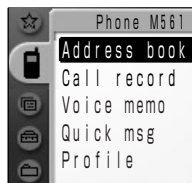

3 Turn to select "Profile," and press (select).


➔ The Profile listing display appears so that you can confirm your e-mail address.



You can also confirm your e-mail address by pressing and in the standby display.

Changing your e-mail address

Your e-mail address is automatically determined when you make the initial settings. You can change this e-mail address to any address you like.

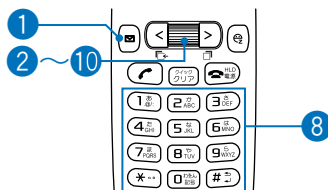


- 1** Press (mail) in the standby display.

➡ The E-mail menu appears.




- 2** Turn to select "Settings," and press (select).


➡ The E-mail settings display appears.

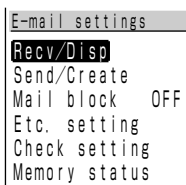

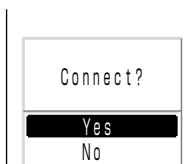

- 3** Turn to select "Etc. setting," and press (select).

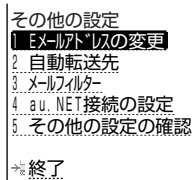

- 4** Turn to select "Yes," and press (select).



Changing your e-mail address (continued)

- 5 Turn  to select "1 E メールアドレスの変更," and press  (OK).

メールアドレスを変更します。以下のご注意を確認した上でアドレスの変更を行ってください。

あらかじめご了承ください。



承諾する

戻る

- 6 Turn  to select "承諾する," and press  (OK).

メールアドレスを変更します。ご希望のメールアドレスを入力してください。

@ezweb.ne.jp

- 7 Turn  to select the entry field, and press  (Edit).

[[Input Text]]

PRE 0byte abAB

- 8 Input the e-mail name, and press  (ok).

 For details on inputting e-mail addresses, see page 74.

What is an "e-mail name"?

The area to the left of the "@" in the e-mail address.

メールアドレスを入力してください。

△△△

@ezweb.ne.jp

送信

リセット

E-mail address

Example: △△△@ezweb.ne.jp


E-mail name Domain

9

Turn  to select "送信," and press  (OK).



When an e-mail address cannot be used

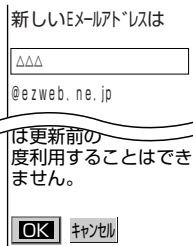
- The e-mail name that you inputted is already registered. Input a different e-mail name.
- Illegal characters have been inputted. Use characters that you are allowed to use in e-mail names (see page 75).



10


Turn  to select "OK," and press  (OK).


 Pressing  returns the display to the E-mail setting display.

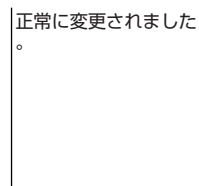

Creating and sending e-mail

You can create and send new e-mail.

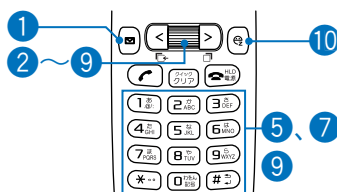


1 Press  (mail) in the standby display.

➔ The E-mail menu appears.




2 Turn  to select "Create new," and press  (select).

➔ The Create display appears.

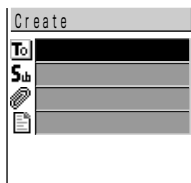

Icons



: Indicates the "address" to send the mail to

: Indicates the "subject" of the mail


: Indicates the "attached data" to attach to the mail

For details on how to send attached data, refer to "Creating e-mail" in the A1301S Manual (PDF, provided).

: Indicates the "main text," the contents of the mail.

3 Turn  to select  (Address), and press  (select).

➔ The input method selection display appears.

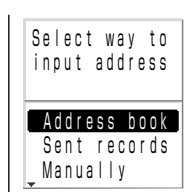

 There are three types of addresses: To, Cc and Bcc.





For details, refer to "Creating e-mail" in the A1301S Manual (PDF, provided).

4

Turn  to select "Manually," and press  (select).

To send mail to the same party from the second mail onwards

It is easy to input the address in the input method selection display in step 3 by doing the following.

- ① Turn  to select "Sent records," and press .
- ② Turn  to select the other party, and press .



To (mandatory)	
■	
PRE	0byte abAB

5



Input the address, and press  (ok).



For details on inputting e-mail addresses, see page 74 .

Create	
To	△△△@□□□.ne.jp
Sub	
	
	
PRE	0byte

6

Turn  to select 5↓ (Subject), and press  (select).



Subject	
■	
PRE	0byte 漢字

7




Input the subject, and press  (ok).



For details on inputting text, see page 74.

Create	
To	△△△@□□□.ne.jp
Sub	Tomorrow's mee
	
	

Creating and sending e-mail (continued)

- 8 Turn  to select  (Main text), and press  (select).

Input text

PRE 0byte 漢字

- 9 Input the main text, and press  (ok).

Create

To: ▲▲@□□.ne.jp

Sub: Tomorrow's mee

Hi, tomorrow's m

eeting is held a

 For details on inputting text, see page 74.

- 10 Press  (send).

Sending E-mail




➡ The message on the right indicates that the e-mail has been sent.

Sending completed


Opening a received e-mail

When you receive an e-mail, "E-mail #" (#: number of received mails) is displayed on the standby display. Received e-mails are saved in the Inbox.

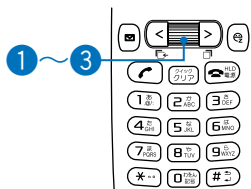

When you receive an e-mail

➔ A message is displayed on the standby display.

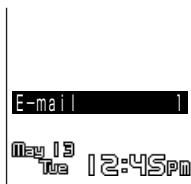


1

Press (confm).

➔ The Inbox display appears.

Icons

: Indicates the folder containing new mail

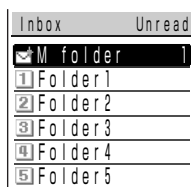

2


Turn to select the folder containing new mail, and press (select).

➔ The folder containing new mail appears.

Icons

: Indicates "read mail" that has already been read

: Indicates "unread mail" that has not yet been read

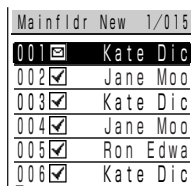

3

Turn to select the new mail, and press (viewer).

Opening a received e-mail (continued)

Viewing received e-mail

Indicates the read mail.

Indicates the mail's sender.

001
[x] 05/13 16:20
From Kate Dickens
School Reunion
We will be reunited again!

Indicates the date and time when the mail was received.

To open an e-mail in the Inbox

Press (mail) in the standby display. The E-mail menu appears.

Icons

: Indicates "unread mail" that has not yet been read. The number on the right is the number of unread mails.

E-mail menu M980	
Create new	
Inbox	1
Outbox	
Check new mail	
Data folder	
Settings	

Select the mail to read from the Inbox by and .

For details on opening e-mail, refer to "About the Inbox" in the A1301S Manual (PDF, provided).

Filtering spam service

The mail filter function allows you to block spam or set your A1301S to receive only specified mail. You can also block mail indicated as "未承諾広告※" that contains lots of spam.

Follow the procedure below to block spam.

- ① Press in the standby display, and select "Settings" → "Etc. setting" by and .
- ② Select "Yes" by and . Select "3 メールフィルター".


The mail filter function contains the following functions.

- "未承諾広告フィルター": To block spam
- "アドレスフィルター": "指定拒否設定" not to receive specified mail
"指定受信設定" to receive only specified mail

This "アドレスフィルター" function filters e-mail from a spammer who pretends to be a user of a cellphone or PHS.

For details on filtering e-mail, refer to "Setting e-mail" in the A1301S Manual (PDF, provided).

Replying to a received e-mail

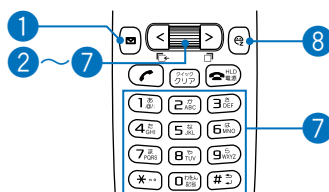


- 1 Press (mail) in the standby display.

➔ The E-mail menu appears.




- 2 Turn to select "Inbox," and press (select).

➔ The Inbox display appears.

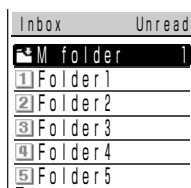

- 3 Turn to select the folder containing the mail to reply to, and press (select).

➔ The Mainfldr New display appears.

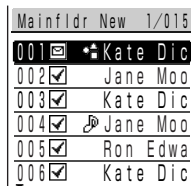


- 4 Turn to select the mail to reply to, and press (viewer).






Replying to a received e-mail (continued)

- 5 Turn  to select **From** (sender), and press  (reply).

➔ The Create display appears.

 The subject is prefixed with "Re:," and the main text of the e-mail is quoted.

Create
To: Kate Dickens
Sub: Re: Meet with y
Tomorrow morning
waiting in the

- 6 Turn  to select  (Main text), and press  (select).

Input text
Tomorrow morning
I'm waiting in
the square in fr
ont of the XX st
PRE 52byte 漢字

- 7 Input the main text, and press  (ok).

 For details on inputting text, see page 74.

 To edit **Sub** (subject), follow steps 6 and 7 on page 49.

Create
To: Kate Dickens
Sub: Re: Meet with y
Thank for your m
ail. I'm looking

- 8 Press  (send).

Sending
E-mail







➔ The message on the right indicates that the e-mail has been sent.

Sending
completed

Using C-mail

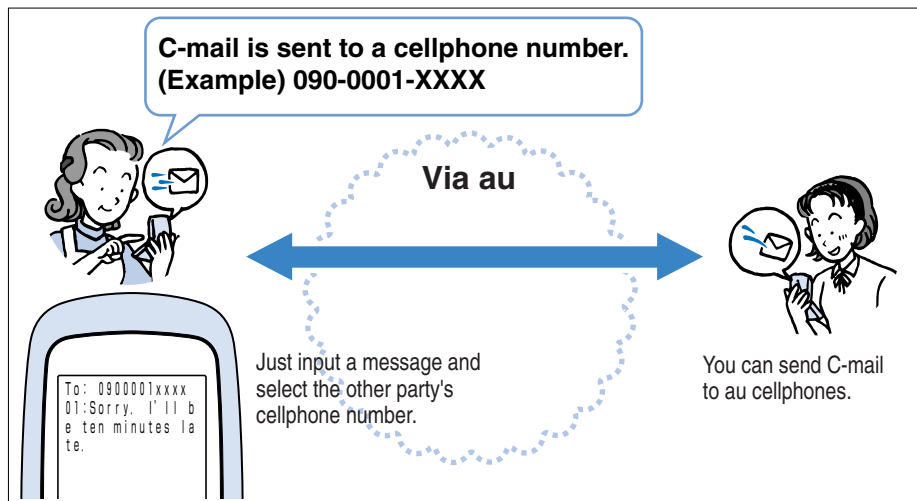
C-mail is a service that allows you to exchange mail with other au cellphones that support C-mail using cellphone numbers. You can send mail comprising up to 50 double byte characters by C-mail.



-  You can use C-mail without having to make any special applications in the metropolitan area or the Chubu District. Users contracted in other areas must apply separately to use the C-mail service.
-  As a part of spam countermeasures (implemented April, 2003), C-mail cannot be sent with "184+send" (without notifying the other party of your caller ID).
-  As a part of spam C-mail countermeasures (implemented June 23, 2003), mail group service was stopped. Transmission of group mail can no longer be done.


Creating and sending C-mail

You can create and send new C-mail.

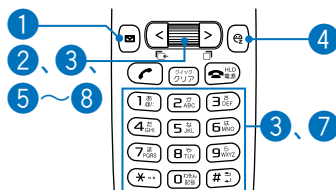

- 1 Hold down (mail) for at least one second in the standby display.

→ The C-mail menu appears.

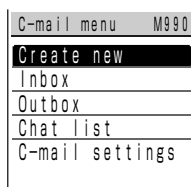

- 2 Turn to select "Create new," and press (select).

→ The Input text display appears.



- 3 Input the main text, and press (ok).

For details on inputting text, see page 74.

To: Unsent
01:Today the mee
ting is held at
3:00 pm.

- 4 Press (send).


→ The send mode selection display appears.

Send method

"C-mail": Sends C-mail as mail in the regular mode

"Chat": Sends C-mail as mail in the chat mode

"Group": Sends a single item of mail to two or more parties

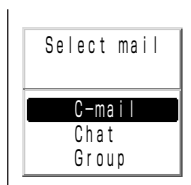

- 5** Turn  to select "C-mail," and press  (select).

Enter
phone number


Address book
Call record
Manually

➔ The input method selection display appears.

- 6** Turn  to select "Manually," and press  (select).

Phone no.

➔ The Phone no. display appears.

- 7** Input the cellphone number, and press  (send).

0900001XXXX


Send
184+send

➔ The send mode selection display appears.

- 8** Turn  to select "Send," and press  (select).

Sending C-mail
(Normal mode)


➔ The C-mail is sent.

-  When the mail arrives at the other party, "Sending completed" is displayed, and the sent mail is saved in the Outbox.




Opening a received C-mail

When you receive a C-mail, "C-mail #" (#: number of received mails) is displayed on the standby display. Received C-mails are saved in the Inbox.

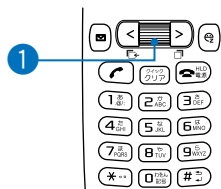

When you receive a C-mail

➔ A message is displayed on the standby display.

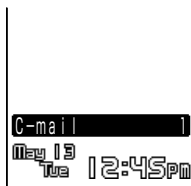


1

Press  (confm).


➔ The details of the mail appears.


001: Jane Moore
Tomorrow the meeting will be held at 3:00 am.
TEL030001XXXX


To open a C-mail in the Inbox


Hold down  (mail) for at least one second in the standby display. The C-mail menu appears.

Icons

: Indicates "unread mail" that has not yet been read. The number on the right is the number of unread mails.

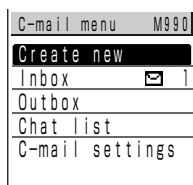

Select the mail to read from the Inbox by  and .


 For details on opening C-mail, refer to "About the Inbox" in the A1301S Manual (PDF, provided).


Using the Camera


The camera function on the A1301S allows you to take photos and movies.
Photos and movies you have taken can be sent attached to e-mail.

Taking photos

To take photos, point the lens at the subject and change the standby display to the monitor screen.

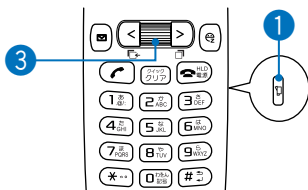


- 1 Point the lens at the subject, and press  (camera) in the standby display.

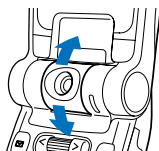

➡ The monitor screen for taking photos appears.



- 2 Adjust the orientation of the lens to display the image you want to take on the monitor screen.

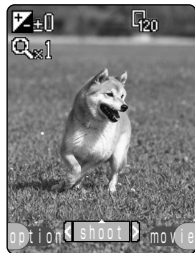

- 3 Press  (shoot).

➡ You will hear the shutter sound, and the photo you have taken will be displayed. (preview screen)



Taking photos (continued)

To save a photo

Press  (save).

➡ "Saved in data folder" is displayed, and the display returns to the monitor screen.



Saved photos are saved to the "My photo" folder in the data folder.




Photos are saved under a title in the format "date_ time ~ serial number." For example, the photo taken on May 12, 2003 at 10:30 is saved under the title "030512_1030~01."

To send a photo attached to an e-mail

See page 65.

Viewing photos you have taken

You can view photos you have taken.

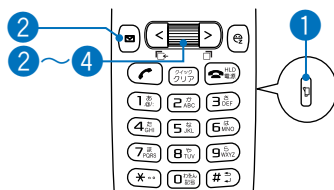

1 Press (camera) in the standby display.

➡ The monitor screen appears.

2 Press (option), turn to select "My photo," and press (select).

➡ The My photo display appears.

My photo		
Data disp		
03/05/16	5	
03/05/15	10	
03/05/14	3	
03/05/13	6	
03/05/12	13	

3 Turn to select the date folder containing the photo you want to view, and press (select).

➡ The data list for My photo appears.

03/05/13		
9KB	030513	2
9KB	030513	2
8KB	030513	1
6KB	030513	1
7KB	030513	1
8KB	030513_0	


4 Turn to select the photo you want to view, and press (viewer).

➡ The photo you selected appears.



Recording a movie



While you are recording a movie, the movie is displayed rotated on its side. (The display returns to normal when you play back the movie.) Use your A1301S on its side according to the following procedure.

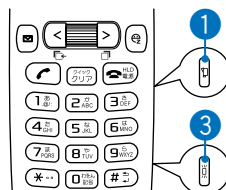

- 1 Point the lens at the subject, and hold down (camera) for at least one second in the standby display.

➔ The "S (Mail)" monitor screen appears.

- 2 Hold your A1301S with both hands, and display the image you want to take on the monitor screen.

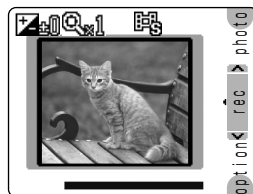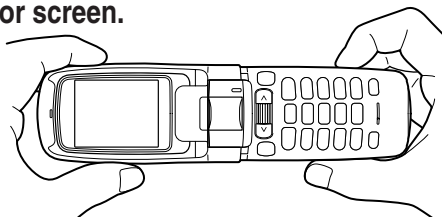

- 3 Press (shutter).


➔ You will hear the shutter sound, and "REC" will flash when recording starts.

To cancel recording

Press (cancel).

To stop recording


Press () or (shutter).

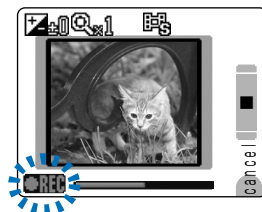


When recording is stopped or the recording time ends

The end tone sounds, and the recording is automatically played back.

When automatic playback ends, the initial recorded screen is displayed vertically.

During automatic playback, you can adjust the volume of the recorded movie by turning .



-  The default recording time is five seconds. The recording time setting can be changed to up to 15 seconds. For details, refer to "Making photo settings" in the A1301S Manual (PDF).




To save a recording

Press  (save).

➡ "Saved in data folder" is displayed, and the display returns to the monitor screen.

 Movies are saved to the "My movie" folder in the data folder.


 Photos are saved under a title in the format "mode_date_time ~ serial number." For example, the movie recorded on May 12, 2003 at 10:30 is saved under the title "S_030512_1030~01."

To send a movie attached to an e-mail

See page 65.

Viewing a movie you have recorded

You can play back movies you have recorded.

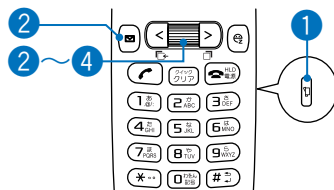

1

Hold down (camera) for at least one second in the standby display.

➡ The monitor screen appears.

2

Press (option), turn to select "My movie," and press (select).

My movie	
Data disp	42
03/05/16	5
03/05/15	8
03/05/14	12
03/05/13	15
03/05/12	2

➡ The My movie display appears.

3

Turn to select the folder containing the movie you want to view, and press (select).

03/05/13	
20KB S_030513	
19KB S_030513	
17KB S_030513	
22KB S_030513	
18KB S_030513	
19KB S_030513	

➡ The data list display for My movie appears.


4

Turn to select the movie you want to view, and press (play).

➡ The movie you selected is played back.



Sending an image with an e-mail immediately after you take it

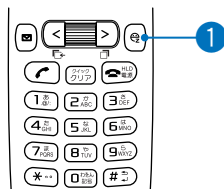You can send images (photos and movies) you have taken attached to e-mail.



1 Press (E-mail) in the preview screen immediately after you have taken the image.

➡ The message "Saved in data folder" is displayed, and the Create display appears.

 The image you took is automatically saved to e-mail  (attached data). For details on how to create e-mail, see page 48.


 To send images that have been saved, refer to "Creating e-mail" in the A1301S Manual (PDF, provided).

Photo-mail

You can use "Photo-mail" to automatically convert and send images so that they can be viewed properly on other cellphones even if the other party is not using an au cellphone. To use Photo-mail, change the other party's e-mail address as follows.

Other party	E-mail address	New address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
J-Phone	△△△@jp-○*.ne.jp	△△△@jp-○*.nepm.jp
au TU-KA	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp


* ○ varies according to the area.



 For details on sending images, refer to "Sending images" in the A1301S Manual (PDF, provided).

Using EZweb

EZweb (Internet)

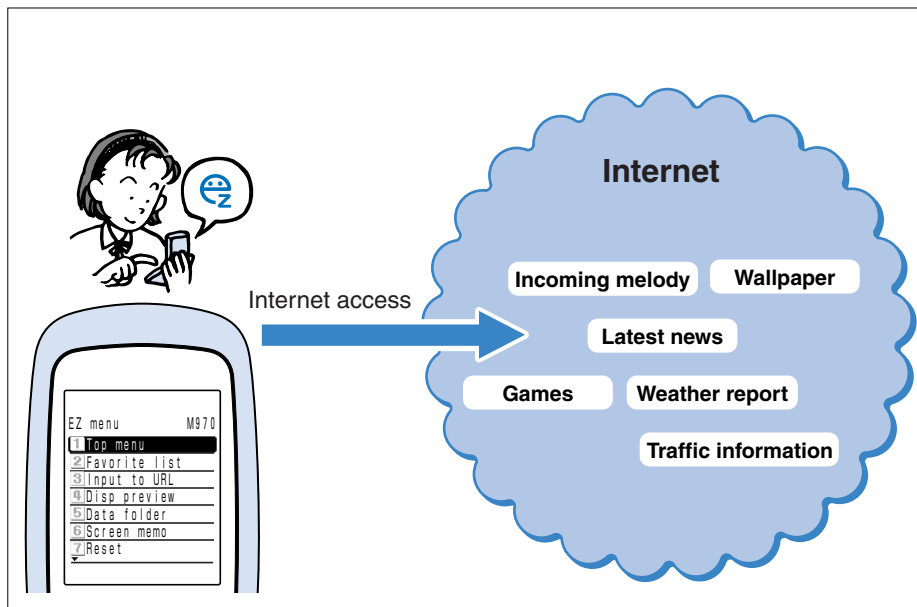
EZweb is an information service that allows you to enjoy the Internet on your cellphone. With EZweb, you can obtain incoming melodies, the latest news, and other contents (information) from information sites (web sites that provide information).



-  You must apply to use the EZweb service. If you did not apply for use of the EZweb service when you bought your A1301S, contact au by phone or at a store.
-  Before you use the e-mail and EZweb services, you must make the initial settings. If you have not made the initial settings, see page 20.


Learning Basic EZweb

Display the EZ top menu, the portal for entering the Internet.

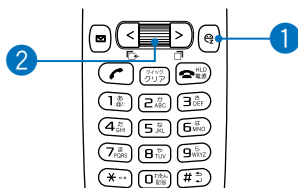

1 Press **EZ** in the standby display.


→ The EZ menu appears.

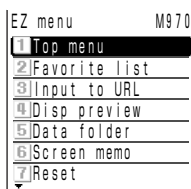

2 Turn **Left Arrow** to select "1 Top menu," and press **Right Arrow** (select).

→ The EZ トップメニュー display appears.

It may take a short while for the display to appear.

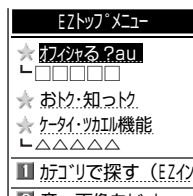

To access information sites (sites that provide information)

Turn **Left Arrow** to select the desired information site, and press **Right Arrow** (OK).

Pressing **Left Arrow** returns the display to the previous display. Holding down **Left Arrow** for a longer time returns you to the EZ Top menu.

Pressing **Right Arrow** exits EZweb.

You can scroll the display up and down by turning **Left Arrow**.

Pressing **Left Arrow** returns the display to the previous display.

Some information sites are subject to additional information costs besides communications costs.

Viewing information sites

You can access (connect to) EZweb (Internet) from the EZ Top menu. EZweb allows you to access handy, fun information sites (contents).



オフィシャル? au

Information recommended by au such as the latest EZweb information.

おトク・知トク

Sites that offer presents and prizes.

ケータイ・ツカエル機能

Portal to sites that use terminal functions such as ezmovie.

カテゴリで探す (EZ インターネット)

Allows you to access all official sites by category.

音・画像をゲット

Sites that allow you to download Chakuuta, incoming melodies, standby displays, and other data.

最新情報をチェック

Portal to news, weather, stock prices, and other sites.

生活情報を調べる

Portal to lifestyle information that will make your life more amenable.

ショッピングする

Shopping site with a wide variety of goods.

コミュニケーションする

Portal to greeting mail, bulletin boards, chat and other sites.

遊ぶ・楽しむ

Provides various entertainment and fun information.

検索・数字でアクセス

Provides access to sites by allowing you to input key words or Internet numbers.

料金・申込・インフォ

Allows you to confirm costs and view au information.


地域情報

Provides regional information.

解説付トップメニュー

Provides explanations for the EZ Top menu.


Downloading an incoming melody

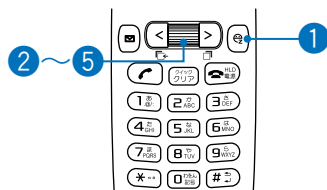

Example: To download a new incoming melody


1 Press **EZ** (EZ) in the standby display.

➡ The EZ menu appears.

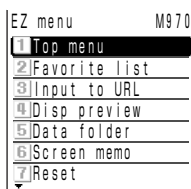


2 Turn to select "1 Top menu," and press (select).

➡ The EZ トップメニュー display appears.

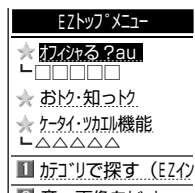


3 Turn to select "2 音・画像をゲット," and press (OK).

➡ The 音・画像をゲット display appears.

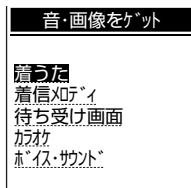

4 Turn to select "着信メロディ," and press (OK).

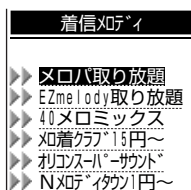

➡ The 着信メロディ display appears.



The display layouts and displayed details are just an example. These are subject to change.

Downloading an incoming melody (continued)



Turn  to select the desired information site, and press  (OK).

➡ The download procedures appear. Follow the on-screen instructions.



For details on how to use downloaded incoming melodies, see page 32.




To use information sites that incur additional information costs, you must input your EZ password. If you are using such services for the first time, set your EZ password. Note down the EZ password that you have set.




Some information sites are subject to additional information costs besides communications costs.

Saving your favorite sites

You can save up to 100 titles and URLs (site addresses) of information sites that you frequently visit.

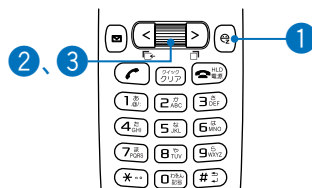

- 1** Display the site you want to save, and press  (Browser Menu).

➔ The Browser Menu appears.




- 2** Turn  to select "1 Mark Site," and press  (OK).

➔ The display for saving the title and URL appears.


Title:	Today's weather
URL:	http://xxxxxx.co.jp/tenki/

- 3** Turn , press  (Save), and then press  (OK).

➔ The currently displayed site is saved to "Favorite list."


 Some sites cannot be saved to "Favorite list."

Viewing a site saved to the Favorite list

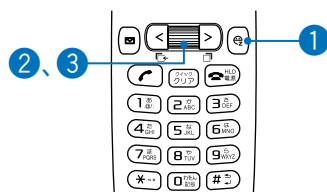


- 1 Press  (EZ) in the standby display.

➡ The EZ menu appears.

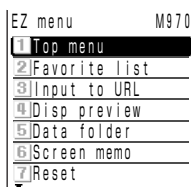

- 2 Turn  to select "2 Favorite list," and press  (ok).

➡ The Favorite list appears.

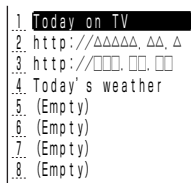


- 3 Turn  to select the site you want to view, and press  (Go).

➡ The site you want to view appears.


Viewing call costs

From EZweb, you can confirm EZweb call costs, communications costs and other costs you have incurred.

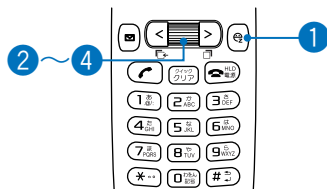


1 Press (EZ) in the standby display.

➡ The EZ menu appears.

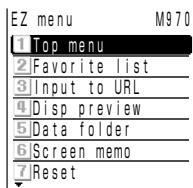

2 Turn to select "1 Top menu," and press (select).


➡ The EZ トップメニュー display appears.

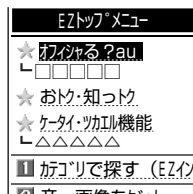

3 Turn to select "9 料金・申込・インフォ," and press (OK).


➡ The 料金・申込・インフォ display appears.

You can view a list of saved charged sites at "有料サービス利用情報."

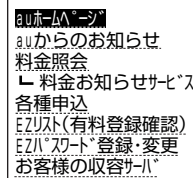

4 Turn to select "料金照会," and press (OK).

➡ The 料金照会 display appears so that you can select the cost item you want to confirm.

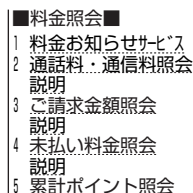


Character Key assignment table (single byte alphanumerics)


Each press of a key displays characters in the order shown below.

Key	Number of times to press the key												
	1	2	3	4	5	6	7	8	9	10	11	12	13
1 あ あ	.	@	/	:	-	_	~	1					
2 か ABC	a	b	c	A	B	C	2						
3 さ DEF	d	e	f	D	E	F	3						
4 た GHI	g	h	i	G	H	I	4						
5 な JKL	j	k	l	J	K	L	5						
6 は MNO	m	n	o	M	N	O	6						
7 ま PQRS	p	q	r	s	P	Q	R	S	7				
や TUV	t	u	v	T	U	V	8						
9 わ WXYZ	w	x	y	z	W	X	Y	Z	9				
0 わん 記号	Space	!	?	-	,	'	;	()	"	&	¥	0
* **	!	?	-	,	'	;	()	"	&	¥		

Characters shaded in the above table are not allowed in e-mail names on the A1301S.

 You can input your e-mail name using up to 20 single byte alphanumerics including "-" (hyphen) and "." (period). Note, however, that two "." (periods) cannot be used in a row, or at the beginning or end of your e-mail name. Also, your e-mail name cannot be prefixed by "0."

To consecutively input characters assigned to the same key

After you have inputted the first character, press  and press the next character key.

Example: To input "ab"

Press  once.

Input text

a

Press .

Input text

a

Press  twice.

Input text

ab


To delete characters


Press  to delete characters.

To enter a line feed

Press .


Inputting icons

In addition to kanji, hiragana, and English characters, you can input katakana, numbers, symbols and icons such as .

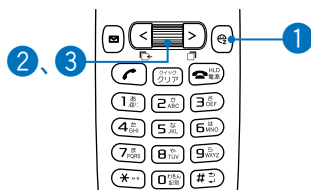




1

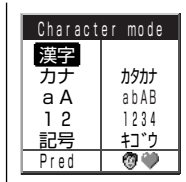
Press  (mode) in the Input text display.




➡ The Character mode display appears.

2

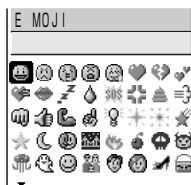

Turn  to select  (E MOJI), and press  (select).



➡ The E MOJI display appears.






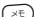

 You can select symbols or handy common phrases in the Character mode display. For details, refer to "Inputting text" in the A1301S Manual (PDF).

3

Turn  to select the icon you want to use, and press  (select).

➡ The icon appears in the text input display.

Troubleshooting

Symptom	Items to Check
Power does not turn on.	<p>Is the battery pack properly attached?</p> <ul style="list-style-type: none"> ● Properly attach the battery pack. For details, refer to "Replacing the Battery Pack" in the A1301S Manual (PDF). <p>Is the battery pack charged?</p> <ul style="list-style-type: none"> ● Charge the battery pack. <p>Did you hold down  for at least one second?</p> <ul style="list-style-type: none"> ● Hold down  for at least one second.
Cannot make calls.	<p>Is "圏外" displayed ?</p> <ul style="list-style-type: none"> ● Extend the antenna, and make a call at a place where "圏外" is not displayed. <p>Did you input the area code before inputting the phone number?</p> <ul style="list-style-type: none"> ● When making a call to a phone other than a cellphone, first input the area code even if you are inside the same city. <p>Is the antenna extended?</p> <ul style="list-style-type: none"> ● Hold the tip of the antenna, and extend the antenna until you hear it click into place. <p>Is the power on?</p> <p>Did you press  ?</p>
Calls do not arrive.	<p>Is "圏外" displayed on the display?</p> <ul style="list-style-type: none"> ● Extend the antenna, and move to a place where "圏外" is not displayed. <p>Is the power on?</p> <ul style="list-style-type: none"> ● Hold down  for at least one second.
No reaction when a key is pressed.	<p>Is the power on?</p> <ul style="list-style-type: none"> ● Hold down  for at least one second.
Warning tone sounds, and power turns off.	<p>There is not enough power left in the battery pack.</p> <ul style="list-style-type: none"> ● Charge the battery pack.
Incoming calls are automatically answered.	<p>Is record message set?</p> <ul style="list-style-type: none"> ● Hold down  for at least one second to cancel record message.
You cannot hear the other party.	<p>Is the phone volume during a call set low?</p> <ul style="list-style-type: none"> ● Turn  upwards while you are talking. The volume during a call increases.

Other Features

The A1301S has other handy features in addition to those introduced in this English Basic Manual (PDF).

For details, refer to "What A1301S offers" in the A1301S Manual (PDF).

Ornamental panel

You can change how your A1301S looks by replacing the ornamental panel.

Ornamental menu (LCD color taste)

You can select menu display patterns. You can also set downloaded ornamental data.

Standby display settings (Stand-by display)

You can select any standby display. You can also set any favorite screen saver.

Chakuuta

This service allows you to set an artist's song as the incoming ring.

Incoming indicator (Indicator)

You can select the color and flashing pattern of the incoming indicator when you have an incoming call or mail.

Quick display

The date and time are displayed on this display even with the main unit folded.

Quick Message (Quick msg)

You can play a message to the other party who is calling you when you cannot answer the phone.

PhotoMixer

You can create your own original works by using PhotoMixer templates.

Index

A

accessories	10
address book	36
editing saved data	40
making a call from	38
saving new data	36
saving received call	42

B

battery pack	10, 12
---------------------------	--------

C

call	
making	22
receiving	24
call methods	22
camera	59
movie	62
photo	59
cellphone etiquette	3
center jog	11, 15
charge	12
C-mail	55
creating and sending	56
opening	58
confirming your call costs	73
confirming your cellphone number	19

D

desktop holder	10, 12
domain	46

E

e-mail	43
creating and sending	48
initial settings	20
opening	51

replying	53
sending an image with an e-mail	65

e-mail address	44, 45
-----------------------------	--------

changing	45
inputting	48, 74

e-mail name	46
--------------------------	----

English display	15
------------------------------	----

EZweb	66
--------------------	----

basic operations	67
initial settings	20

EZ Top menu	67, 68
--------------------------	--------

I

icons	18, 76
--------------------	--------

incoming indicator	11, 24
---------------------------------	--------

incoming melody	69
------------------------------	----

incoming ring	28
----------------------------	----

tone	32
volume	28

Index menu

function	16
view	15

Inputting text	74
-----------------------------	----

Internet	66
-----------------------	----

site	68, 71
------------	--------

initial settings	20
-------------------------------	----

K

Keys	17
-------------------	----

M

mail

creating and sending C-mail	56
-----------------------------------	----

creating and sending e-mail	48
-----------------------------------	----

C-mail	55
--------------	----

e-mail	43
--------------	----

manner mode	5, 18, 30
--------------------------	-----------

movie

recording	62
viewing	64

N

names of parts	11
-----------------------------	-----------

O

one-ring call	7, 27
icon	27

Opening a mail

C-mail	58
e-mail	51

P

photo

photo-mail	65
taking	59
viewing	61

playing back recorded message	35
--	-----------

power	14
--------------------	-----------

R

received call record	17
-----------------------------------	-----------

Received display	26
-------------------------------	-----------

reception	4, 12
------------------------	--------------

recording	34
------------------------	-----------

record message	34
-----------------------------	-----------

playing back	35
--------------------	----

redial call record	17
---------------------------------	-----------

Redial display	25
-----------------------------	-----------

redialing

number you called	25
number you received	26

S

Set Language	15
---------------------------	-----------

site

saving	71
viewing in Favorite list	72

soft key	17
-----------------------	-----------

spam	7, 52
-------------------	--------------

standby display	14
------------------------------	-----------

V

viewing

movie	64
photo	61

volume	31
---------------------	-----------

Dial services available on au cellphones

- Calls to regular phones nationwide
- Calls to cellphones, PHS and carphones nationwide
- au international call service
(005345: There is no need to apply for this service.)
- Pager calling (You must input the area code.)
- 171 (NTT disaster services voice mail)
- 177 (Weather report: You must input the area code.)
- 117 (Time)
- 104 (NTT phone number guide)
- 110 (Emergency calls to police)★
- 119 (Emergency calls to fire brigade)★
- 118 (Emergency calls to the Maritime Safety Agency)★
- Maritime calls

* The following NTT services are not available.

Collect calls, telegrams, message dialing, dial Q2, calls to Shinkansen bullet train, and 116 (NTT sales offices)

★ When making emergency calls to the police, fire brigade, and the Maritime Safety Agency, be sure to check where you are calling from.

In some areas you are calling, you might not be able to be connected to the supervisory contact point for that service.

* For inquiries, call:

au Customer Service Center (General information)


From regular phones:  0077-7-111 (toll free)

From au cellphones: 157 (area code not required) (toll free)

Sales: au (KDDI) · OKINAWA CELLULAR TELEPHONE COMPANY

Manufacturer: Sony Ericsson Mobile Communications Japan, Inc.



Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

A-BMK-100-11(1)
July 2003 edition